

## Safety Strap Instructions

This Cabinet includes a safety strap kit to prevent tip-over.

This safety strap kit is meant as an aid. The manufacturer is not liable for improper installation or improper use by placing heavy loads on the strap, bracket or screw.

Due to different flooring the cabinet must be placed square on the floor. For nonlevel floors there are levelers located underneath the cabinet. Adjust levelers accordingly.



**Must install bracket prior to any interior cabinet assembly.**


### Parts Enclosed:



(1x) Screw



(1x) Safety strap

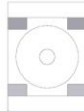


(1x) Safety Bracket


### Installation Instructions:

1. Place the cabinet in the desired location.
2. Locate the stud in the wall behind the cabinet. Consult a local professional for proper installation methods. Screw must go atleast  $1/2$ " into stud.
3. Mark wall  $3/4$ " below top of cabinet on the stud.
4. Verify that you have enough strap to reach the back of the cabinet.
5. Drill a pilot hole into the stud where it has been previously marked with a  $3/32$ " drill bit.
6. Attach the safety bracket to the wall using the screw and the pilot hole that was just drilled. (see Figure 1)
7. Line up the cabinet with the bracket placed on the wall. (see Figure 2)
8. Slide the safety strap through the safety bracket on the wall and then through the hook on the back of the cabinet. (see Figure 3)
9. Tighten the safety strap. Be careful not to over tighten.

**Figure 1**

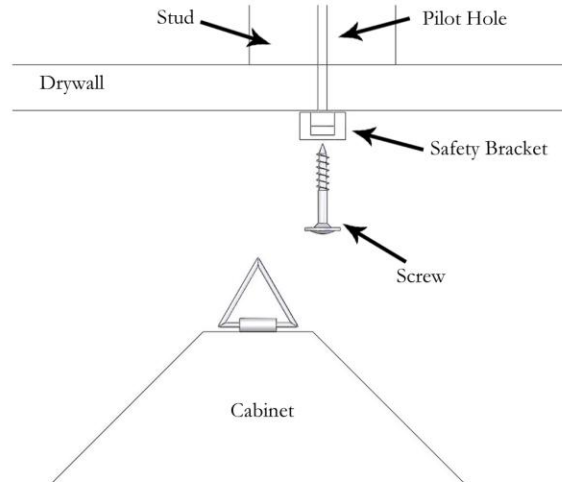

**Figure 2**

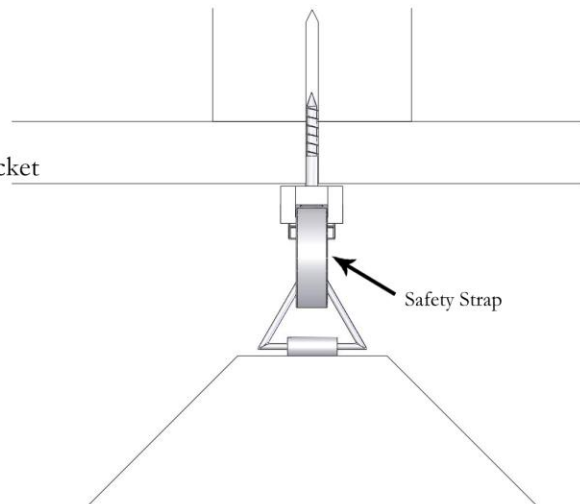

**Figure 3**

